



PT1G with PTCM

Rotational Speed Sensor for Turbochargers

PT1G with PTCM datasheet

Revision: 5

Release Date: 2024-11-29

Document Status: Production

PICOTURN is a system for measuring the rotational speed of turbochargers. It's functional principle is one-megahertz pulse induction and eddy current discrimination, done with a solenoid sensor mounted in the compressor housing through a bore. The sensor detects and counts compressor vanes one by one. When compared to optical detection, this inductive method benefits from its lack of sensitivity to dirt, oil and dust. When compared to the magnetized nut method, the PICOTURN system is safer as there is no concern with nuts coming loose and destroying the charger and the engine.

The system is made of a sensor with 1.5m cable, a signal-conditioning box and a system cable for output and power supply. It is capable of speed measurement up to 400,000 rpm. The minimum speed is 200 rpm. The high sensitivity allows a large distance between sensor and the rotating vanes in the range of 1 mm at 0.6mm vane thickness. The sensor and box are IP67 proof in case the sensor is connected and fixed correctly.

Various sensors are available. They differentiate by the length and thread of the sensor head. The PTSM-H series in addition is optimized for high sensitivity, targeting titanium wheel and other critical applications.

Key Features & Benefits

Eddy-current damping based rotational speed sensors

Rotational speed 390 rpm to 400,000 rpm

Dedicated for compressor wheels made of **aluminum or titanium**

PTCM V1.1 signal conditioning box with digital and analog outputs

Wide operating ranges:

- Electronics: -40 to +85°C
- Sensor tip: -40 to +230°C (250°C peak 5 min.)
- Sensor tip -H type: -40 to +250°C (270°C peak 5 min.)
- VDD: 9 to 30 V

Applications

- Turbocharges on engine test benches
- Turbocharges in test cars

Content Guide

| | |
|--|-----------|
| Key Features & Benefits | 2 |
| Applications | 2 |
| Content Guide..... | 3 |
| 1 PTCM V1.1..... | 4 |
| 1.1 PTCM Set | 4 |
| 2 Technical Data | 5 |
| 3 Ordering Information | 6 |
| 4 Mechanical Data..... | 7 |
| 4.1 PTCM Dimensions | 7 |
| 4.2 Sensor Tip Dimension | 8 |
| 5 Sensor Application..... | 8 |
| 6 PTCM Interface - Electrical Connections..... | 10 |
| 6.1 Analog Interface | 10 |
| 7 LED Display functionality | 11 |
| 7.1 Diagnostics..... | 11 |
| 7.2 Analog Signal for optimal Sensor Positioning..... | 12 |
| 8 Internal switches | 13 |
| 8.1 Number of Vanes - Code Switch | 13 |
| 8.2 Measurement at high signal levels | 13 |
| 8.3 Measuring very high Rotational Speeds..... | 14 |
| 9 Calibration | 14 |
| 9.1 Calibration process | 15 |
| 9.2 Verification | 16 |
| 10 RoHS Compliance & ScioSense Green Statement..... | 18 |
| 11 Copyrights & Disclaimer | 18 |
| 11.1 Important Safety Information..... | 19 |
| 11.1.1 Product Use | 19 |
| 11.1.2 Installation..... | 19 |
| 11.1.3 Signal words and symbols used | 19 |
| 11.1.4 Safety messages..... | 19 |
| 12 Revision Information | 20 |

1 PTCM V1.1

The PTCM V1.1 signal-conditioning box drives the sensor, converts the sensor signal to rotational speed and provides this information as a digital pulse output or an analog output voltage. It is based on the PICOTURN-BM V6.2, reduced to a much smaller body size and now IP67 proof. It is compatible with PTSM sensors of the first generation.

PTCM has two interface connectors

- Sensor interface, internal SMB connector. Together with an elastic joint and an outer nut the sensor is additionally fixed and sealed to be IP67 proof.
- Power and signal interface. 8-pin connector for the power supply, the digital pulse interface and the analog interface with 0.5 V to 4.5 V.

The sensor detects every vane of the compressor wheel. Therefore, the number of vanes needs to be set according to the turbocharger in use to get the output voltage or, for the digital interface, to get one pulse per full turn. The number of vanes is programmable between 1 - 15 / 16 - 31. The 1 to 15 code switch and the switch for the higher number range are placed inside, but the position of the code switch can be seen through a window in the housing. The water-proof housing has to be opened to change the vane number.

1.1 PTCM Set

A complete set is made of three parts:

- PTCM V1.1
- Any sensor out the collection of sensors of the PT1G series
- Power and interface cable



Figure 1: PTCM with sensor and system cable

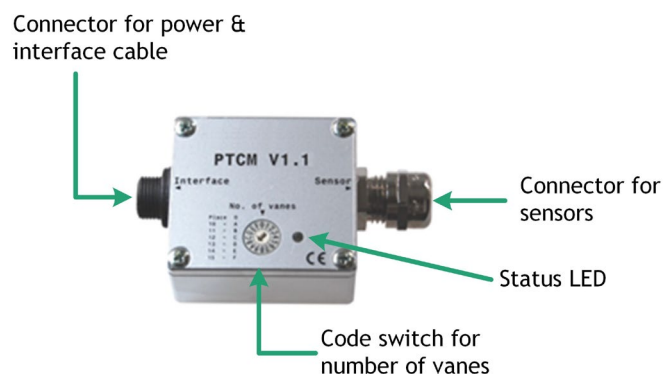


Figure 2: PTCM Detail

2 Technical Data

| Model | PTCM V1.1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-------------------------------------|--|---|-------|----|---|----|-------|--|---|-------|---|-------|----|-------|----|-------|---|-------|---|-------|----|-------|----|-------|---|-------|---|-------|----|-------|----|-------|
| Sensors suitable | PTSM 5.3, PTSM 5.5, PTSM 5.6, PTSM 5F.2, PTSM 5F.3, PTSM 5F.5, | | | | PTSM-H 5.3, PTSM-H 5.5, PTSM-H 5.6, PTSM-H 5F.2, PTSM-H 5F.3, PTSM-H 5F.5 | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Target material | Aluminum | | | | Aluminum, titanium | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Operating temperature sensor tip | -40°C to 230°C, max. +250°C for 5 minutes | | | | -40°C to 250°C, max. +270°C for 5 minutes | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Operating temperature sensor cable | -40°C to 180°C | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Operating temperature PTCM | -40°C to 85°C | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Distance sensor tip to blade for Al | 1 to 2mm for passenger cars, 2 to 3mm for trucks. The maximum distance depends strongly on the turbocharger geometry, the vane thickness at the sensor tip and the alloy of the wheel. So only an indication can be given. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Cable length sensor | 1.5m, no extension cable to be used | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Speed range | 200rpm to 400,000rpm | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Number of vanes | Digital out: 1 to 15, or 16 to 31, Analog out: 4 to 15, or 16 to 31, | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Digital output | Pulsed CMOS, 5V / 10 mA, 50% duty cycle, frequency precision 0.009% of full scale. One impulse per N vanes, N = 1 to 31 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Analog output | Range 0.5 V to 4.5 V, 0.5 V = stand still, slope 80,000 rpm/V (subject to correct vane number setting) Voltage precision 0.5 % of full scale at 25°C Measurement rate approximately 260 Hz, resolution 390 rpm when set to 10 vanes. Update rate at vane number N = <table><tr><td>4</td><td>104Hz</td><td>7</td><td>182Hz</td><td>10</td><td>260Hz</td><td>13</td><td>339Hz</td></tr><tr><td>5</td><td>130Hz</td><td>8</td><td>208Hz</td><td>11</td><td>286Hz</td><td>14</td><td>365Hz</td></tr><tr><td>6</td><td>156Hz</td><td>9</td><td>234Hz</td><td>12</td><td>313Hz</td><td>15</td><td>391Hz</td></tr></table> | | | | | | | | 4 | 104Hz | 7 | 182Hz | 10 | 260Hz | 13 | 339Hz | 5 | 130Hz | 8 | 208Hz | 11 | 286Hz | 14 | 365Hz | 6 | 156Hz | 9 | 234Hz | 12 | 313Hz | 15 | 391Hz |
| 4 | 104Hz | 7 | 182Hz | 10 | 260Hz | 13 | 339Hz | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | 130Hz | 8 | 208Hz | 11 | 286Hz | 14 | 365Hz | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | 156Hz | 9 | 234Hz | 12 | 313Hz | 15 | 391Hz | | | | | | | | | | | | | | | | | | | | | | | | | |
| Power supply | 9 to 30V DC / typ. 45 mA | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Housing | 45mm x 50mm x 25mm, IP67 (when sensor connected) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

3 Ordering Information

Table 1: Product list

| Part No. | Product | Description | | | |
|---|---|---|----------|-----------------|----------------------------------|
| 221030002 | PTCM ATI V1.1 | Signal conditioning box with standard interface | | | |
| 221040002 | PTCM-L ATI V1.1 | Signal conditioning box with LEMO interface connector | | | |
| 220320001 | PTCM 1,5 M | System cable, open ends, 1.5m length | | | |
| 220320002 | PTCM 3 M | System cable, open ends, 3m length | | | |
| 220320003 | PTCM BNC 1,5 M | System cable, BNC connectors, 1.5m length | | | |
| 220320004 | PTCM LEMO | System cable, LEMO - open ends, 2 m length | | | |
| 220330001 | PTCM MP | PTCM mounting plate | | | |
| Sensors | | | | | |
| New | | Sensor length/ thread length | Diameter | Cable length | Temperature range sensor head |
| 220150008 | PTSM 5.3 | 60 mm/54 mm | M5 x 0.8 | 0.95 m | -40 °C to +230 °C |
| 220150006 | PTSM 5.5 | 46 mm/40 mm | M5 x 0.8 | 0.95 m | -40 °C to +230 °C |
| 220150012 | PTSM 5.6 | 75 mm/69 mm | M5 x 0.8 | 0.95 m | -40 °C to +230 °C |
| 220150004 | PTSM 5F.2 | 41 mm/25 mm | M5 x 0.5 | 0.95 m | -40 °C to +230 °C |
| 220150014 | PTSM 5F.3 | 56 mm/40 mm | M5 x 0.5 | 0.95 m | -40 °C to +230 °C |
| 220150016 | PTSM 5F.5 | 76 mm/60 mm | M5 x 0.5 | 0.95 m | -40 °C to +230 °C |
| H-types for higher temperature and higher sensitivity | | | | | |
| 220180003 | PTSM-H 5.3 | 60 mm/54 mm | M5 x 0.8 | 0.95 m | -40 °C to +250 °C |
| 220180004 | PTSM-H 5.5 | 46 mm/40 mm | M5 x 0.8 | 0.95 m | -40 °C to +250 °C |
| 220180005 | PTSM-H 5.6 | 75 mm/69 mm | M5 x 0.8 | 0.95 m | -40 °C to +250 °C |
| 220180003 | PTSM-H 5F.2 | 41 mm/25 mm | M5 x 0.5 | 0.95 m | -40 °C to +250 °C |
| 220180004 | PTSM-H 5F.3 | 56 mm/40 mm | M5 x 0.5 | 0.95 m | -40 °C to +250 °C |
| 220180008 | PTSM-H 5F.5 | 76 mm/60 mm | M5 x 0.5 | 0.95 m | -40 °C to +250 °C |
| | H-types: 270°C peak temperature for 5 min, higher sensitivity, for use in critical applications | | | | |
| 220120001 | Extension cable 1.5 m, SMB to SMB | | | | |

4 Mechanical Data

4.1 PTCM Dimensions

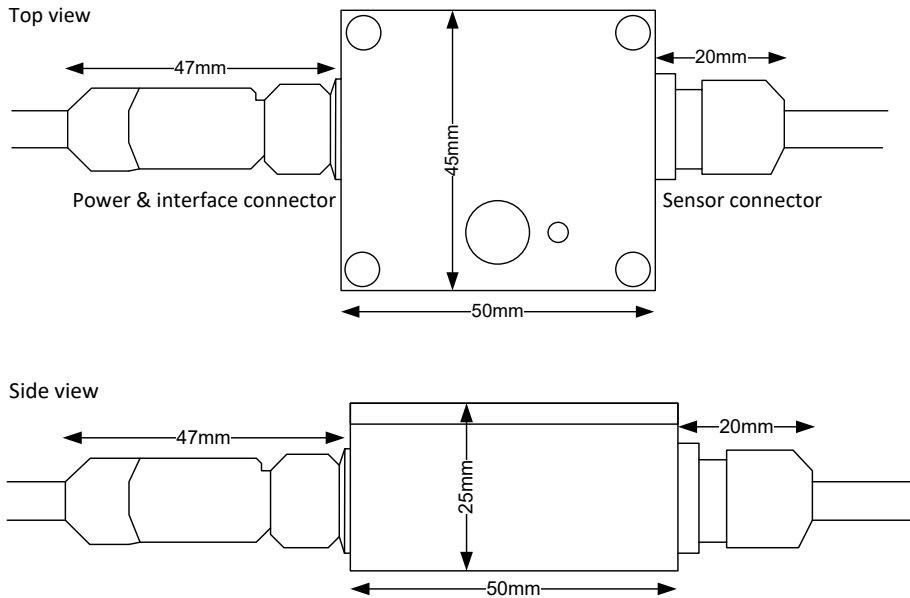


Figure 3: PTCM Outline

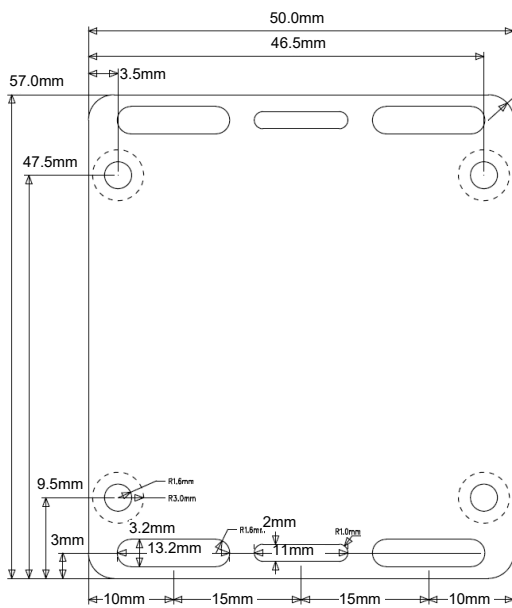
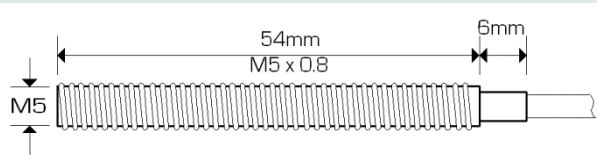
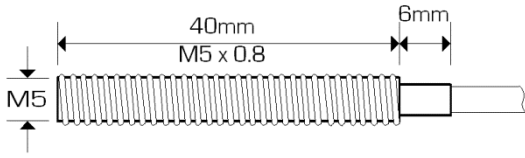
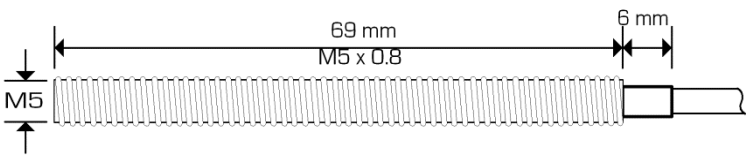
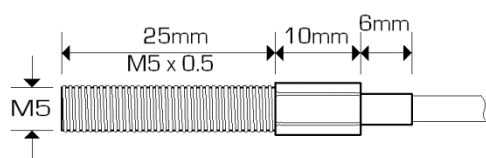
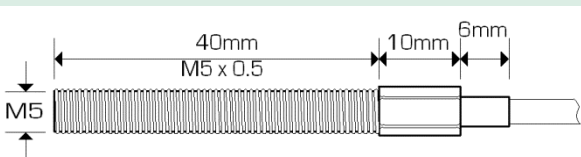
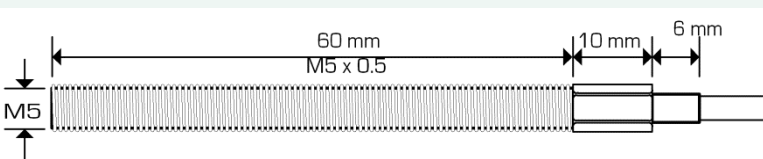


Figure 4: PTCM fixing plate (optional)

4.2 Sensor Tip Dimension


Table 2: Dimensions

| Sensor | Drawing |
|--------------------------|--|
| PTSM 5.3 PTSM-H 5.3 |  |
| PTSM 5.5 PTSM-H 5.5 |  |
| PTSM 5.6 PTSM-H 5.6 |  |
| PTSM 5F.2 PTSM-H 5F.2 |  |
| PTSM 5F.3 PTSM-H 5F.3 |  |
| PTSM 5F.5 PTSM-H 5F.5 |  |

5 Sensor Application

CAUTION: Prior to the PICOTURN product installation, be sure that the turbocharger is cool.

The sensor body should be mounted in principle as indicated (see Figure 5). The compressor housing needs to be removed. Drill a hole into the case and cut a thread, according to the chosen sensor housing. Select the position of the hole so that every vane, both big and small, will be sensed. Place the sensor directly in front of the small vanes (“splitter vanes”), avoiding the vicinity of their upper edge (which could induce error into the system).

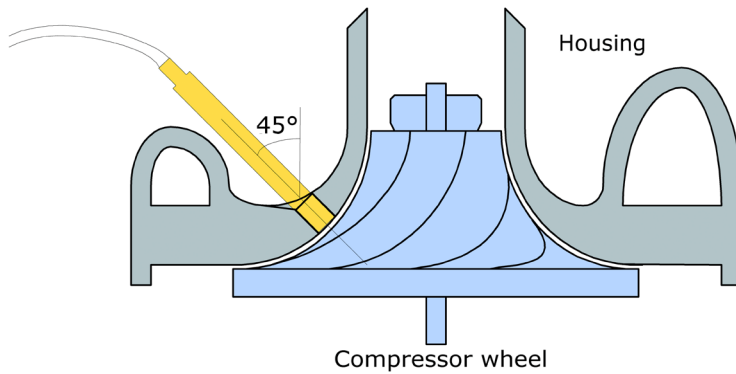

The correct mounting position and method depends on the individual geometry and characteristics of the turbocharger in use. Contact the manufacturer of the turbocharger for information about details on possible positions and correct mounting instructions.

Figure 5: Sensor Application

IMPORTANT: Make sure the tip of the sensor is approximately flush with the inside contour of the housing. Otherwise, it may hit and damage the compressor wheel.

Notice: Lock torque: The sensor body is not a 5-millimeter bolt, but merely a sleeve with some 0.3 mm thick walls. Apply only a fraction of the torque you would with a solid bolt: 0.3 Nm maximum (finger force, not fist force).

Environment: The sensor element with respect to its electronics and “superseal” connector has been designed for under-hood operation and is considered engine compartment tolerant.

The sensors connect with an SMB plug to the PTCM and are fixed and sealed with the press fitting.

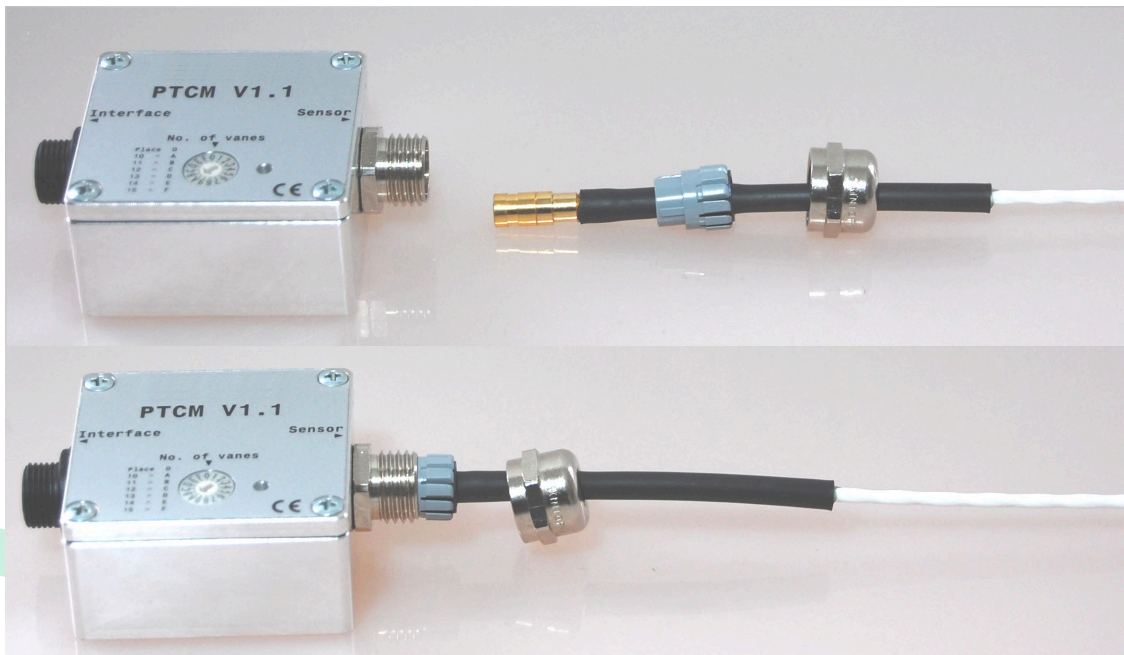


Figure 6: Sensor - PTCM connection

6 PTCM Interface - Electrical Connections

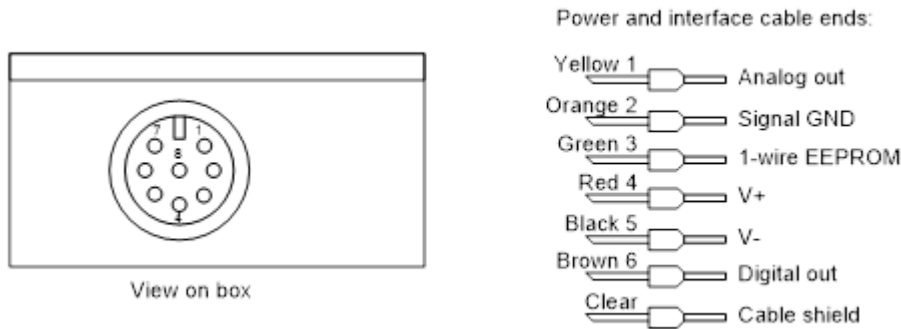


Figure 7: PTCM output connector

6.1 Analog Interface

The analog output voltage covers 0.5 V to 4.5 V. The slope is 80,000 rpm/V, corresponding to 0 rpm at 0.5 V and 320,000 rpm at 4.5 V output voltages, respectively. The above values are valid only if the number of vanes is correctly encoded. The analog output works correctly for vane numbers of 4 to 31, it is not applicable for settings of 1, 2 and 3.

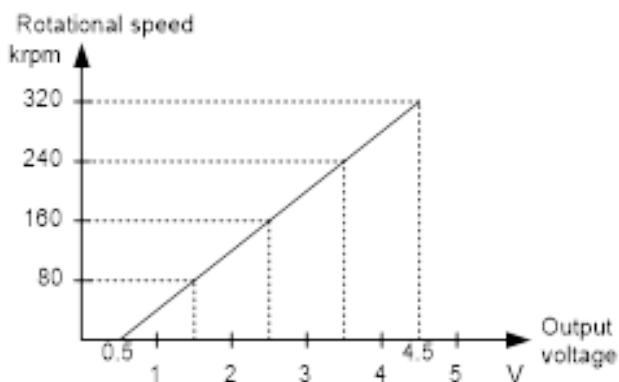


Figure 8: Speed vs. Voltage

Hint: If the vane number setting differs from the number of vanes on the wheel, the voltage slope and maximum speed at the analog output changes. This can be used to measure a rotational speed above 320,000 rpm at the analog output (setting a higher number, see example 1), or to increase resolution (setting a lower number, see example 2).

Example 1:

Real vane number: 8
 Set number: 12
 -> Slope: $1.5 \times 80,000 \text{ rpm/V}$
 $= 120,000 \text{ rpm/V}$
 Maximum speed: 480,000 rpm

Example 2:

Real vane number: 10
 Set number: 5
 -> Slope: $0.5 \times 80,000 \text{ rpm/V}$
 $= 40,000 \text{ rpm/V}$
 Maximum speed: 160,000 rpm

7 LED Display functionality

7.1 Diagnostics

Table 3: LED functionality

| Mode | LED behavior | Circumstance | Consequences |
|------|--|-------------------------|--|
| A | LED stays dark | | No power supply: the supply voltage is missing or below 8 V. Please check the power supply |
| B | LED on Continuously (green) | Turbo standing still | The rotational speed is zero. The controller is ok and in wait state. |
| | | Turbo rotates | The sensor head is too far away from the wheel. To check the controller, remove the sensor and check that the LED is blinking. |
| C | LED on Continuously (red) | Turbo rotates | The system is operating normally. |
| D.1 | LED shines red with short green breaks | Turbo rotates | The sensor signal is correctly captured most of the time and the controller can measure. But the signal strength is quite low. If possible, bring the sensor head 0.1 to 0.2 mm closer to the wheel. |
| D.2 | LED shines green with short red breaks | Turbo standing still | There are electromagnetic disturbances. On engine test stations this might be due to ground loops. Add an additional GND wire from the controller box to the engine. Otherwise the signal might be disturbed, especially at low rotational speeds. |
| | | Turbo rotates | The sensor signal is too weak. If possible bring the sensor head closer to the wheel. |
| E | LED blinking fast with about 8 Hz (red/green) | Sensor not connected | Please connect the sensor. |
| | | Sensor disconnected for | Device test. The controller is ok and the supply voltage sufficient. |
| | | device test | The sensor, the sensor cable or the sensor connector is defective or the power supply voltage is too small (below 8V). |

7.2 Analog Signal for optimal Sensor Positioning

The measurement signal can also be tested quantitatively. This is helpful during application but may also be of interest during operation. It helps to achieve a higher signal-to-noise ratio of the measurement chain.

The number of vanes has to be set to 0 (code switch set to '0' and internal DIP switch DIVPULS off). A voltmeter has to be connected to the analog output, being set to the right measurement range (e.g. 5V). In contrast to all other settings, the output voltage is below 0.2V when the turbo is standing. Any other setting of the number of vanes results in an output voltage of 0.5V at standing turbo.

When the turbo wheel rotates, the indicated voltages can be interpreted according to the following table, assuming that the noise level is low (engine off):

Table 4: Signals for sensor positioning

| Voltage | LED Light | Interpretation |
|----------------------------------|---|---|
| Less than 0.20V | LED shines green permanently or with short red breaks | The sensor is too far away, bring it closer to the wheel. The LED is also permanently green if the wheel is standing still or too slow (below 200rpm). |
| Between 0.20V and 0.25V | LED shines red with short green breaks | Bring the sensor 0.1 mm closer to the wheel. |
| More than 0.25V but less than 4V | LED shines red permanently | Good signal. For gasoline engines it should be more than 1.5V to have enough margin against noise. |
| More than 4V | LED shines red permanently | Be careful. The sensor is very close to the wheel and might touch it. |

8 Internal switches

8.1 Number of Vanes - Code Switch

The number of vanes of the turbo wheel is set by a rotational code switch which is placed inside the PTCM. The standard range is 1 to 15 vanes, which can be changed to 16 to 31 vanes by setting an inside DIP switch. Open the case and find the position of switch no. 5, DIFFPULS16_31, according to the figure below. Default setting is off, switch to on for having 16 to 31 vanes.

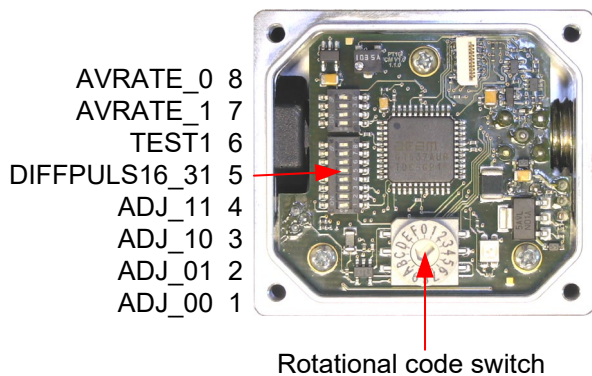


Figure 9: Sensor - PTCM switches

Table 5: Switch settings

| Code switch | 0 | 1 | 2 | 3 | 4 | ... | 9 | A | ... | F |
|-----------------------|------------------|----------------|----------------|----------------|----|-----|----|----|-----|----|
| DIVPULS16_31 = off | 1 ^{1,2} | 1 ¹ | 2 ¹ | 3 ¹ | 4 | ... | 9 | A | ... | F |
| DIFFPULS16_31 = on | 16 | 17 | 18 | 19 | 20 | ... | 25 | 26 | ... | 31 |

8.2 Measurement at high signal levels

The default setting of PTCM is for medium and weak signals. The internal DIP switches for filter settings will be set as follows:

- TEST1 = On
- AVRATE1 = On
- AVRATE0 = Off

¹ Not applicable to analog output

² Sensor positioning signal at analog output.

If the sensor provides a very high signal level (analog output voltage > 4 V at vane number = 0, see section 3.5), then you should make changes stepwise in the following order, until the signal voltage falls below 4V:

1. Screw back the sensor a little bit
2. Set AVRATE1 = AVRATE2 = Off
3. Set TEST1 = Off.

8.3 Measuring very high Rotational Speeds

The default settings of the PTCM are optimized for rotational speed measurement up to 280,000 rpm. For measuring higher rotary speed, it could be helpful to adjust the internal filter settings to avoid interferences. In case of problems at high speed, the following can be tried:

Set DIP switch 'AVRATE_1' to OFF (see picture above). This adjustment tunes the internal filter for a wider range and improves the system for measuring higher speed frequency.

With this measure the system supports a safe detection up to 100,000 vanes per second. Please consider the increased sensitive of the system towards external disturbances due to the extended sensitivity range of the internal filter. Therefore we recommend to apply this measure only as far as required for a stable high speed measurement.

9 Calibration

In a calibration process the offset and slope of the analog output get corrected. The sensor is simulated by calibration device PTCT.

In order to get started the following steps are necessary:

- Connect PTCM device under test to a 12 V DC power supply (battery, stationary power supply). Connect the PTCT to the same power supply.
- Connect the PTCM by means of the short PTCT cable to the PTCT.
- Connect the analog output of the PTCM to a calibrated, precision multi-meter to measure the output voltage.
- Connect the digital output to a calibrated, precision frequency counter.

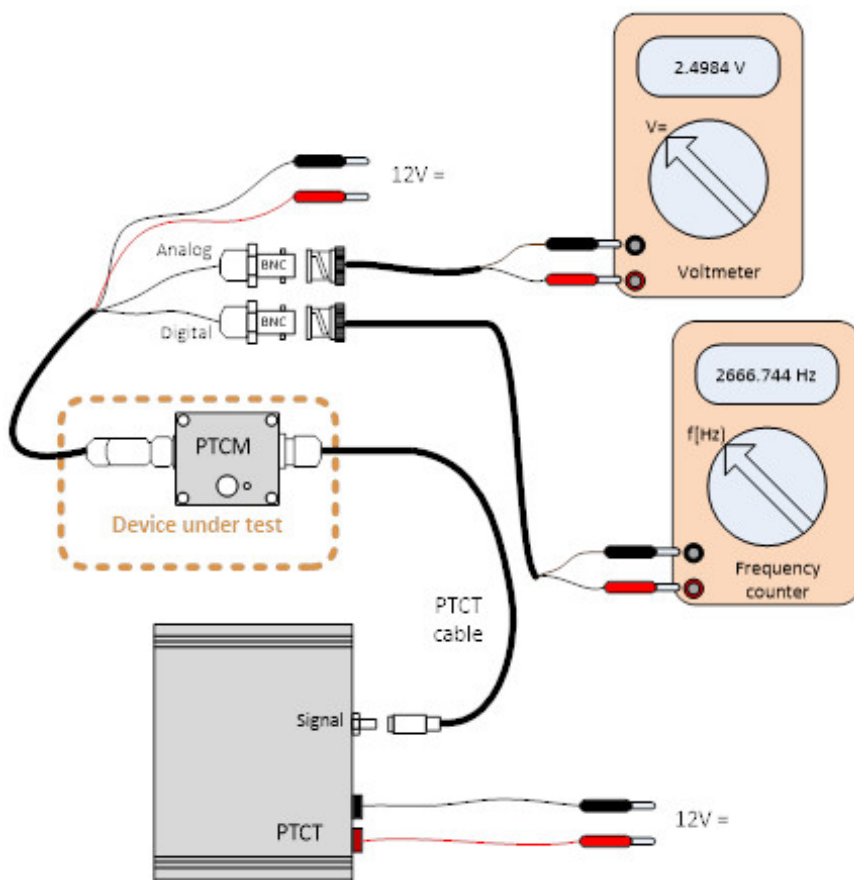


Figure 10: Calibration setup

9.1 Calibration process

For calibration, please open the housing. Find the fourfold switches and the potentiometer, marked by red circles in the following figure:

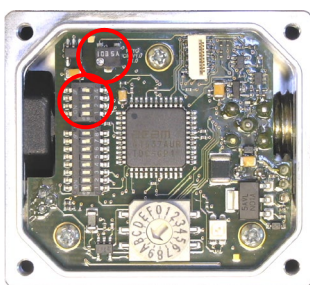


Figure 11: Calibration points

The four switches adjust the offset in steps and the potentiometer adjusts the maximum value (slope). The switches add 5 mV, 10 mV, 20 mV or 40 mV in offset.

1. Configure the PTCM and PTCT for the same vane number, e.g. 7 .
2. Set the PTCT to speed "7" = 280,000 rpm. The analog output voltage of the PTCM should be 4.0 V. Adjust the potentiometer for an output voltage of 4.0 V, as precisely as feasible.
3. Now set the speed at PTCT to 0 = 0 rpm. The analog output voltage should be 0.5 V. Correct the lower value by means of the jumpers to come as close as possible to 0.5V.

4. Now check the upper value by setting the speed at PTCT to “7” again. If now the upper output voltage shows an increased deviation from 4.0 V, repeat steps 2-4 until no further improvement is achieved.

9.2 Verification

The verification is done in two steps. First, the number of vanes is set to a fixed value and only the speed setting is changed. Second, the speed is set to a fixed value and the vane number is changed.

- Verification with fixed vane number

The number of vanes is set to a fixed value, namely 10, on both PTCM and PTCT. On the PTCM rotational encoder, “A” stands for 10.

In the following, the setting for speed is increased from 0 to 8 by means of the pushbuttons, and the values for output voltage and frequency are recorded. A sample report is available as a ready-made Excel sheet from ScioSense at no charge.

The tolerable deviation is:

Voltage +/- 0.5% of full scale

Frequency +/- 0.009% of full scale

Table 6: Verification

| Sweed switch setting | Nominal speed [1/min] | Nominal voltage [V] | Nominal frequency [Hz] |
|----------------------|-----------------------|---------------------|------------------------|
| 0 | 0 | 0.5000 | 0.000 |
| 1 | 40000 | 1.0000 | 666.667 |
| 2 | 80000 | 1.5000 | 1333.333 |
| 3 | 120000 | 2.0000 | 2000.000 |
| 4 | 160000 | 2.5000 | 2666.667 |
| 5 | 200000 | 3.0000 | 3333.333 |
| 6 | 240000 | 3.5000 | 4000.000 |
| 7 | 280000 | 4.0000 | 4667.445 |
| 8 | 320000 | 4.5000 | 5333.333 |

- Verification with fixed nominal speed

On the PTCT the number of vanes has to be set to 4 and the speed has to be set to 7. This corresponds to a pulse frequency of 18,665.42 Hz.

The number of vane setting on the PTCM is changed from 4 to 15 (10 = A, 15 = F), and again the values for output voltage and frequency are recorded.

Table 7: Verification with fixed speed

| No. of vanes setting | Nominal speed [1/min] | Nominal voltage [V] | Nominal frequency [Hz] |
|----------------------|-----------------------|---------------------|------------------------|
| 4 | 279981 | 4.000 | 4666.355 |
| 5 | 223985 | 3.300 | 3733.084 |
| 6 | 186654 | 2.833 | 3110.903 |
| 7 | 159989 | 2.500 | 2666.489 |
| 8 | 139991 | 2.250 | 2333.178 |
| 9 | 124436 | 2.055 | 2073.936 |
| 10 | 111993 | 1.900 | 1866.542 |
| 11 | 101811 | 1.773 | 1696.856 |
| 12 | 93327 | 1.667 | 1555.452 |
| 13 | 86148 | 1.577 | 1435.802 |
| 14 | 79995 | 1.500 | 1333.244 |
| 15 | 74662 | 1.433 | 1244.361 |

Settings 1, 2 and 3 produce a correct frequency at the digital output, but the analog output is not designed for these settings and sets the output to 5 V.

Note: The maximum vane frequency (vaness per second) is 100 kHz. If this frequency is exceeded due to the speed and No. of vanes setting, the calibration device automatically goes back to standstill. Choosing parameters out of range (e.g. No. of vanes < 4 or > 32) also causes standstill simulation.

10 RoHS Compliance & ScioSense Green Statement

RoHS: The term RoHS compliant means that Sciosense B.V. products fully comply with current RoHS directives. Our semiconductor products do not contain any chemicals for all 6 substance categories, including the requirement that lead does not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, RoHS compliant products are suitable for use in specified lead-free processes.

ScioSense Green (RoHS compliant and no Sb/Br): ScioSense Green defines that in addition to RoHS compliance, our products are free of Bromine (Br) and Antimony (Sb) based flame retardants (Br or Sb do not exceed 0.1% by weight in homogeneous material).

Important Information: The information provided in this statement represents Sciosense B.V. knowledge and belief as of the date that it is provided. Sciosense B.V. bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. Sciosense B.V. has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. Sciosense B.V. and Sciosense B.V. suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

11 Copyrights & Disclaimer

Copyright Sciosense B.V High Tech Campus 10, 5656 AE Eindhoven, The Netherlands. Trademarks Registered. All rights reserved. The material herein may not be reproduced, adapted, merged, translated, stored, or used without the prior written consent of the copyright owner.

Devices sold by Sciosense B.V. are covered by the warranty and patent indemnification provisions appearing in its General Terms of Trade. Sciosense B.V. makes no warranty, express, statutory, implied, or by description regarding the information set forth herein. Sciosense B.V. reserves the right to change specifications and prices at any time and without notice. Therefore, prior to designing this product into a system, it is necessary to check with Sciosense B.V. for current information. This product is intended for use in commercial applications. Applications requiring extended temperature range, unusual environmental requirements, or high reliability applications, such as military, medical life-support or life-sustaining equipment are specifically not recommended without additional processing by Sciosense B.V. for each application. This product is provided by Sciosense B.V. "AS IS" and any express or implied warranties, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose are disclaimed.

Sciosense B.V. shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interruption of business or indirect, special, incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of Sciosense B.V. rendering of technical or other services.

11.1 Important Safety Information

11.1.1 Product Use

PICOTURN products are designed for industrial use. The intended use of the product is the measurement of speed of a turbocharger in a test bench environment or in driving tests. For proper installation and usage please follow the mounting instructions in this document. During operation of the test bench (including the motor and turbocharger), no persons must be present in the test room. For use in driving tests, in which persons may be present, use the product in such a way that in case of malfunctions or error, personnel and equipment are not endangered. Any use other than the one described above is considered as non-intended use and ScioSense declines any liability with respect to such non-intended use.

11.1.2 Installation

The speed sensor should be installed by a qualified automotive technician. Please carefully read and follow the instructions given in this manual for proper installation and use of the product. Furthermore, please pay attention to any installation instructions given by the turbocharger manufacturer, especially for the mounting of the sensor at the turbocharger and its safe operation. If you have any question or doubts regarding the installation or operation please contact the distributor from whom you purchased the sensor or alternatively contact ScioSense directly.

11.1.3 Signal words and symbols used

The following symbols and signal words are used in this data sheet.

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury

NOTICE is used to address practices not related to physical injury

11.1.4 Safety messages

The following list provides an overview of potential damages that can occur if the turbocharger sensor system is not operated as outlined in this manual.

CAUTION Connect an adequate power supply (meeting the specifications for supply voltage and current) in accordance with safety regulations for electrical equipment. Otherwise there is risk of injury and/or damage to or destruction of the sensor and controller box.

NOTICE Mount the sensor according to the installation instruction in this data sheet and/or the installation instructions of the turbocharger manufacturer. If the sensor is mounted incorrectly, the sensor itself; the turbocharger housing; or the turbo charger wheel (blades) can be damaged. Particularly in the case where the sensor goes too far into the turbocharger cavity, the wheel blades may be touched and thus the turbo wheel damaged. As a consequence, single blades of the turbo wheel could be detached and go into the motor and cause further damage there.

12 Revision Information

Table 8: Revision history

| Revision | Date | Comment | Page |
|----------|-------------|---|------|
| 1 | 17 Jan 2017 | Initial version | |
| 2 | 15 Dec 2023 | Transfer to Sciosense format, combination PTCM with sensors | All |
| 3 | 11 Mar 2025 | Addition of missing article number 220120001 | 6 |

Note(s) and/or Footnote(s):

1. Page and figure numbers for the previous version may differ from page and figure numbers in the current revision.
2. Correction of typographical errors is not explicitly mentioned.



Product PTCM complies with EMC standard 89/336/EEC and standard DIN EN 61326, for laboratory equipment (for use in the electromagnetic environment).

Interference immunity standard 2 (EN 61000-4-4: 0.5KV, -4-6: 1V), In the event of strong electromagnetic interference, the output signal may deviate, but only for the duration of the interference.

